




Using a bonding agent, glue the bio-mat (part I1 rear bottom according to the cutting plan of the bio-mat) to the bottom cutout of the bottom rear plate, place the plate by this bottom side with the bio-mat to a stand.

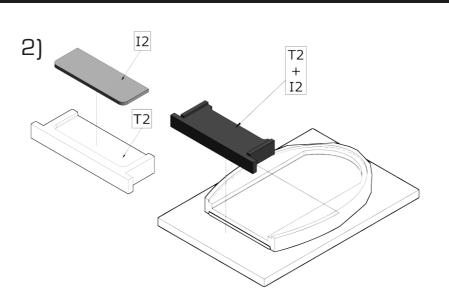

Using a bonding agent, glue the bio-mat (part I2 front bottom according to the cutting plan of the bio-mat) into the bottom cutout of the bottom front plate, place the plate by this bottom side with the bio-mat to the stand

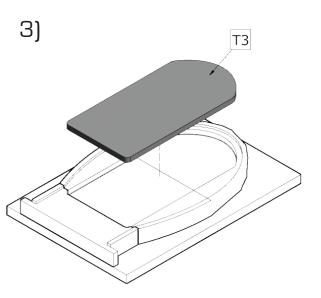


Place the inner plate into the bottom plate cutout.

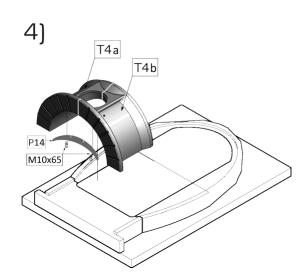


Place the front arch on the front plate of the bottom.


Then bolt the smoke guard to the arch. Do not tighten the joints too firmly, otherwise the damage of the refractory shapes may occur due to heat dilatation.

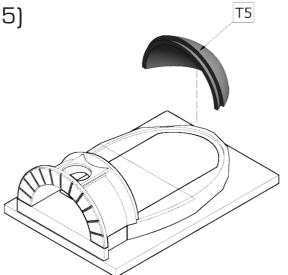


Place the rear arch on the rear plate of the bottom.

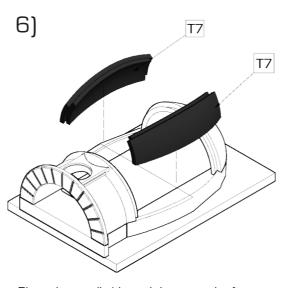


Place the small side arch between the front and rear arch. Side arches should be placed with a hole towards the front portal.

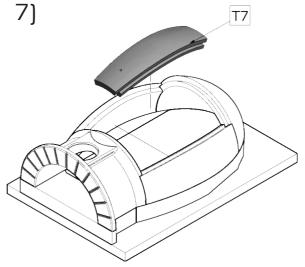


Place the central part of the arch with a hole towards the chimney. Shape should be placed on the top of the arch.

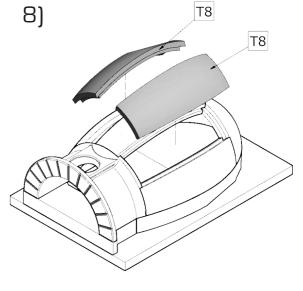


Place the last two shaped pieces into the remaining space so that the locks match.

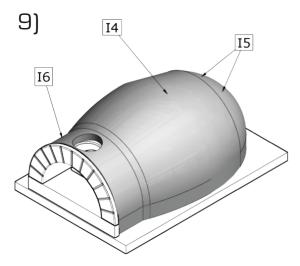


Cover the assembled arch with at least 1 layer of aluminium foil. Place the isolation bio-mat on the aluminium foil according to the cutting plan for the bio-mat. Make sure the bio-mat doesn't get distorted during the application.

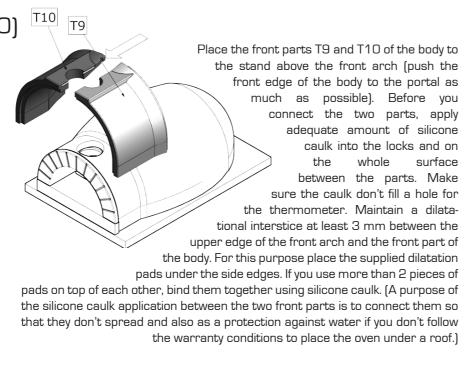


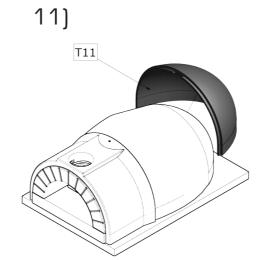

Place the rear body to the stand above the rear arch.

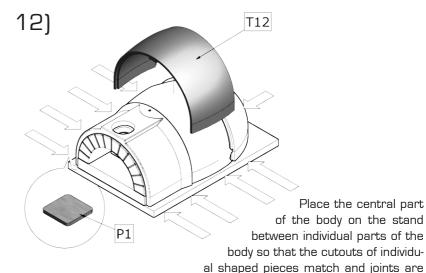


as narrow as possible. If it is necessary to align the parts, place the supplied dilatation pads under the side edges, preferably at places marked by arrows (9 points). Do not remove the pads. If you use more than 2 pieces of pads on top of each other, bind them together using silicone caulk.

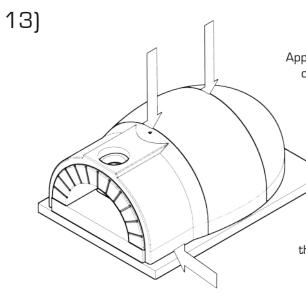

Apply silicone caulk between the body parts and along oven circumference between the bottom edge of the body and the stand - into the formed joint, the used dilatation pads should also get fixed. Silicone the chinks in the way the silicone caulk could be removed in the case of necessity of disassembling the oven (e.g. in the case of a warranty claim).

A purpose of this silicone caulk application is to prevent water to get into the oven in the case you don't follow the warranty conditions to place the oven under a roof. If you follow the conditions, it's enough to fix the dilatation pads.

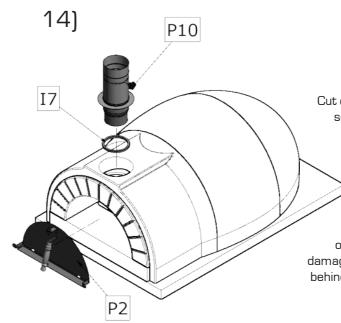

Cut out a hole for the chimney (through insulation and the aluminium foil). Place the rope seal into the opening in the front body into the prepared groove in the inner front arch to create two threads of rope seal. Insert carefully the chimney base until the cover flange sits properly on the oven body. You can check with your hand from inside of the chimney if the rope doesn't get distorted while inserting the chimney base (if the rope gets damaged, heat and smoke can get into the space between the inner shapes and the body). Turn the dumper always lightly, not more than 90 degrees. Otherwise the thread may turn and the sign "open, closed" may not correspond with an actual position. Preferably don't pull out the chimney base out of the oven very often otherwise the rope seal may get damaged. Close the oven with steel door. Last, place the thermometer into the opening behind the chimney (for proper mounting it is necessary to pierce through the insulation).